

Measuring Exterior Storm Windows

Preferred Method: -Measure opening size for storm window
-Allied Window will make appropriate deductions

Meeting Rails: -Measure from the top of the opening down to the center of the existing meeting rail

Alternate Method: -Measure exact size for storm window
-We call this "tip-to-tip" (TTT)
-Allied Window will make no deductions

Type of Installation: **Blindstop** -Storm window to fit into opening
Overlap -Storm window will overlap opening

